

CTM1000 – Firmware Upgrades

Download the latest firmware from www.cirago.com. Please follow the steps below to upgrade the firmware.

1. Copy the firmware upgrade file to a memory card or an external USB device.
2. Insert the memory card or external USB device into the CiragoTV Mini.
3. Locate the saved file by entering the **FILE** menu from the main interface
4. Press the **PLAY** button to start the firmware upgrade.

The upgrading process will take about 1 minute. When it is finished, the blue power indicator on the front of the unit will turn red. Unplug the power cord, and then plug it in again to power on the unit.

Note: Do not turn off the power supply during firmware upgrades.